



ALTUS 6 STEP VISUAL REFERENCE GUIDE

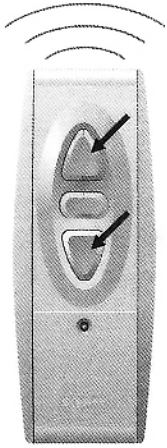

STEP 1


Initiate programming by pressing both the **Up** and **Down** buttons at the same time until the motor jogs.

NOTE: After every command the motor will jog to confirm.

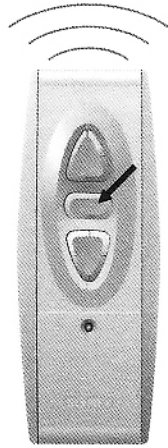


STEP 2

Check the directions by pressing the **Up** or **Down** buttons (**the motor will work in momentary function**). To change the direction press and hold the **Stop** button until the motor jogs..

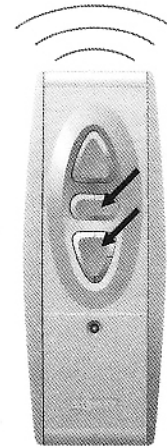


STEP 3

Bring the motor to your desired upper limit. Now press both the **Stop** and **Down** buttons until the motor moves, then release. Stop the motor where the lower limit should be set, you can adjust by pressing the **Up** or **Down** buttons..

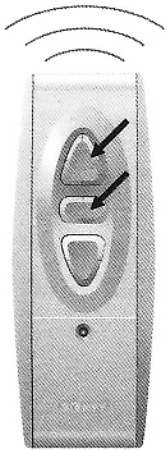


STEP 4

Press and hold the **Stop** and **Up** buttons until the motor moves up, the motor will stop at the original upper limit point, adjust if necessary.

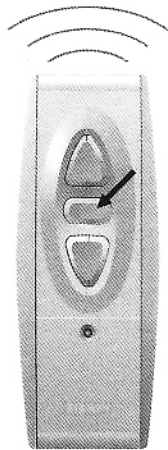


STEP 5

Press and hold the **Stop** button until the motor jogs to confirm the limit setting.

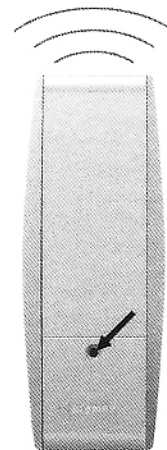

STEP 6

Press and hold the **Program** button on the back of the transmitter until the motor jogs. It will now operate in a maintained function. Double check limits as a precaution.

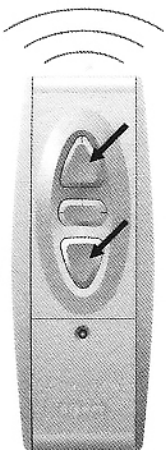

TO ADJUST LIMITS

To change the lower limit: Move the motor to its current lower limit position and let it stop. Press the **Up** and **Down** buttons simultaneously until the motor jogs, then release. Adjust to a new lower limit position. Press the **Stop** button until the motor jogs, then release. Check new limit.

To change the upper limit: Move the motor to its current upper limit position and let it stop. Press the **Up** and **Down** buttons simultaneously until the motor jogs, then release. Adjust to a new upper limit position. Press the **Stop** button until the motor jogs, then release. Check new limit.

NOTE: After every command the motor will jog to confirm.

Please contact SOMFY for detailed installation instructions